

Blockbuster Print Head Cleaner



Print nozzles can become blocked. Ink can also build up on the underside of the print head which when dry can cause a hardened area that can, in turn, cause blockages.

Blockbuster IS the answer.



**PLEASE FOLLOW INSTRUCTIONS CAREFULLY.
IF USED INCORRECTLY DAMAGE MAY BE
DONE TO PRINTER.**

How to use Blockbuster Print Head Cleaner

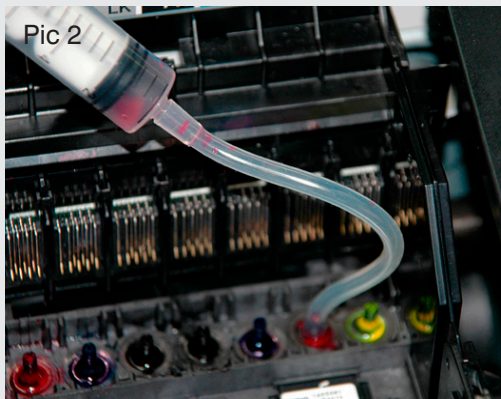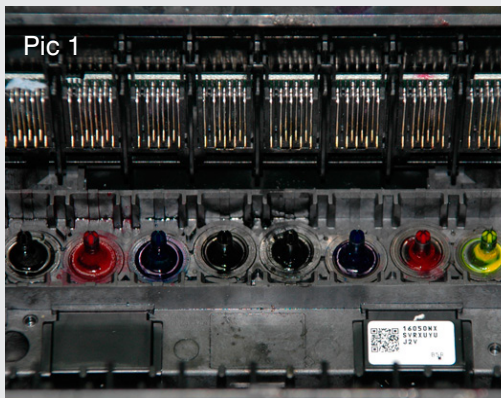

1. Remove the cartridge from the affected colour to reveal the nozzle that needs unclogging. (Pic 1)
2. Using the syringe, fill with 2ml of Blockbuster by dangling the silicone tube into the Blockbuster and pulling on the syringe plunger.
3. Now wipe any liquid from the outside of the tubing and then push the tubing onto the blocked nozzle. (Pic 2)
4. Gently push the syringe plunger in, forcing the Blockbuster liquid through the print head.
5. Now remove the tubing from the print nozzle and leave for about an hour to break down the hardened blockage.
6. Now replace the cartridge and make a head clean followed by a nozzle check.
7. If it still is not perfect, repeat the process of syringing Blockbuster through the head again but this time also sucking the liquid back through the head. Leave with the tube attached to the print nozzle for about an hour then remove the syringe and tubing. Replace the cartridge and make a head clean and nozzle check.

It should now be clear.

Should you need any further assistance please give us a call on **01249 714 555** or email us at **tech@fotospeed.com**

BLOCKBUSTER WILL DISSOLVE AND REMOVE HARDENED INK PARTICLES, HOWEVER IT WILL NOT REPAIR A DAMAGED PRINT HEAD.

www.fotospeed.com